

 
18FF Series

Cage Spring Relay Socket



ORDERING INFORMATION

Type	18FF	-2Z	-C9
Contact arrangement	2Z: 2 Form C 4Z: 4 Form C		
Termination & mounting	C9: Cage spring terminal		




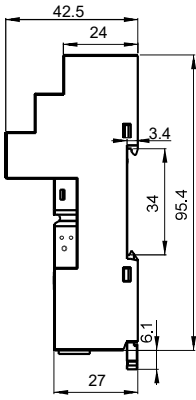
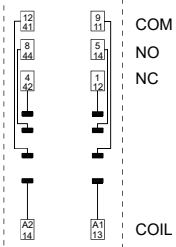

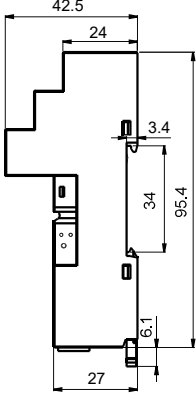
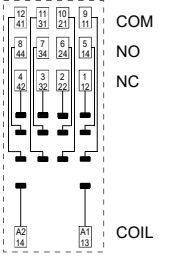
File No.:E253370

CHARACTERISTICS

Type	Nominal Voltage	Nominal Current	Ambient Temperature	Dielectric Strength min.	Screw Torque	Wire Strip Length	Unit weight	Min. package qty.	IP
18FF-2Z-C9	250VAC/DC	7A	-40°C to 70°C	2000 Vrms	—	9mm	Approx.70g	10	IP 20
18FF-4Z-C9	250VAC/DC	7A*	-40°C to 70°C	2000 Vrms	—	9mm	Approx.81g	10	IP 20

Note: The total current of "*" sockets shall not exceed 20A.

OUTLINE DIMENSIONS, WIRING DIAGRAM AND PC BOARD LAYOUT

Socket (If need accessory, please order with type.)	Outline Dimensions	PCB Layout	Accessory Available
18FF-2Z-C9  Spring-loaded terminal, DIN rail mounting, With finger protection device Applicable for 2 poles	 (Top View)	 (Top View)	Plastic retainer: 18FF-H4 Metallic retainer: 18FF-H5 Marker: 18FF-M3 Plug-in module: HFAA~HFHU*
18FF-4Z-C9  Spring-loaded terminal, DIN rail mounting, With finger protection device Applicable for 4 poles	 (Top View)	 (Top View)	Plastic retainer: 18FF-H4 Metallic retainer: 18FF-H5 Marker: 18FF-M3 Plug-in module: HFAA~HFHU*






HONGFA RELAY

ISO9001, IATF16949, ISO14001, ISO45001, IECQ QC 080000, ISO/IEC 27001 CERTIFIED

2023 Rev. 1.01

DIMENSION OF RELATED ACCESSORY (AVAILABLE)

Unit: mm

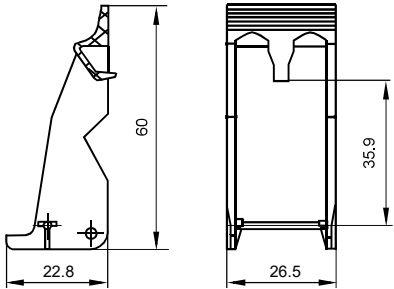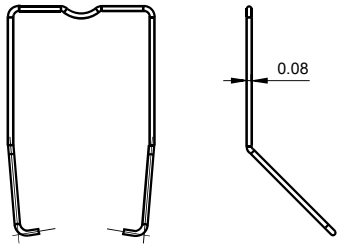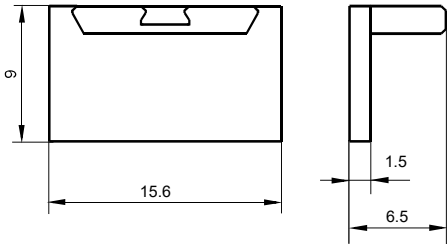Retainer**18FF-H4 (Plastic retainer)****18FF-H5 (Metallic retainer)****Marker****18FF-M3****SELECTION OF PARTS**

Type of Relay	Mounting termination	Socket	Retainer	Marker	Module
HF18FF/□□-2Z1 □□□	without button	18FF-2Z-A2	18FF-H1	—	—
		18FF-2Z-C1	18FF-H2/H3		
		18FF-2Z-C2			
		18FZ-2Z-C2			
		18FF-2Z-C4	18FF-H4/H5	18FF-M1	HFAA~HFHU
		18FF-2Z-C5		18FF-M3	
		18FF-2Z-C8			
		18FF-2Z-C9		18FF-M1	
		18FF-2Z-C10			
		18FF-3Z-C4			
18FF-3Z-C5					
HF18FF/□□-3Z1 □□□					

SELECTION OF PARTS

Type of Relay	Mounting termination	Socket	Retainer	Marker	Module		
HF18FF/□□-4Z1□□□	without button	18FF-4Z-A2	18FF-H1	—	—		
		18FF-4Z-C1	18FF-H2				
		18FF-4Z-C2					
		18FZ-4Z-C2					
		18FF-4Z-C4	18FF-H4/H5	18FF-M1	HFAA~HFHU		
		18FF-4Z-C5		18FF-M3			
		18FF-4Z-C8					
		18FF-4Z-C9				18FF-M1	
		18FF-4Z-C10					
HF18FH/□□-2Z1□□□ HF18FH/□□-3Z1□□□ HF18FH/□□-4Z1□□□	with button	18FF-2Z-C1	18FF-H3	-	—		
		18FF-2Z-C2					
		18FZ-2Z-C2					
		18FF-2Z-C4	18FF-H4/H5	18FF-M1	HFAA~HFHU		
		18FF-2Z-C5		18FF-M3			
		18FF-2Z-C8					
		18FF-2Z-C9		18FF-M1			
		18FF-2Z-C10					
		18FF-3Z-C4				18FF-M1	
		18FF-3Z-C5					
		18FF-4Z-C4		18FF-M1			
		18FF-4Z-C5					
		18FF-4Z-C8				18FF-M3	
		18FF-4Z-C9					
		18FF-4Z-C10		18FF-M1			
		HF18FF-G/□□-2Z1□□□ HF18FF-G/□□-3Z1□□□	without button	18FF-2Z-C1(734)	18FF-H2/H3	-	-
				18FF-2Z-C2(734)			
				18FF-2Z-C4(734)	18FF-H4/H5	18FF-M1	HFAA~HFHU
18FF-2Z-C5(734)							
18FF-3Z-C5(734)							
HF18FH-G/□□-2Z1□□□ HF18FH-G/□□-3Z1□□□	with button	18FF-2Z-C1(734)	18FF-H3	-	-		
		18FF-2Z-C2(734)					
		18FF-2Z-C4(734)	18FF-H4/H5	18FF-M1	HFAA~HFHU		
		18FF-2Z-C5(734)					
		18FF-3Z-C5(734)					
HF18FZ/□□-2Z□□□1/2□	without button	18FF-2Z-A2	18FF-H1	—	—		
		18FF-2Z-C1	18FF-H2/H3				
		18FF-2Z-C2					
		18FZ-2Z-C2					
		18FF-2Z-C4	18FF-H4/H5	18FF-M1	HFAA~HFHU		
		18FF-2Z-C5		18FF-M3			
		18FF-2Z-C8					
		18FF-2Z-C9				18FF-M1	
		18FF-2Z-C10					

SELECTION OF PARTS

Type of Relay	Mounting termination	Socket	Retainer	Marker	Module
HF18FZ/□□-4Z□□□1/2□	without button	18FF-4Z-A2	18FF-H1	—	—
		18FF-4Z-C1	18FF-H2		
		18FF-4Z-C2			
		18FZ-4Z-C2			
		18FF-4Z-C4	18FF-H4/H5	18FF-M1	HFAA~HFHU
		18FF-4Z-C5		18FF-M3	
		18FF-4Z-C8			
		18FF-4Z-C9			
		18FF-4Z-C10		18FF-M1	
		HF18FZ/□□-2Z□□□3□	with button	18FF-2Z-C1	18FZ-H1
18FF-2Z-C2					
18FZ-2Z-C2					
18FF-2Z-C4	18FF-H4			18FF-M1	HFAA~HFHU
18FF-2Z-C5				18FF-M3	
18FF-2Z-C8					
18FF-2Z-C9					
18FF-2Z-C10				18FF-M1	
HF18FZ/□□-4Z□□□3□	18FF-4Z-C1	18FZ-H1		—	—
	18FF-4Z-C2				
	18FZ-4Z-C2				
	18FF-4Z-C4	18FF-H4		18FF-M1	HFAA~HFHU
	18FF-4Z-C5			18FF-M3	
	18FF-4Z-C8				
	18FF-4Z-C9				
	18FF-4Z-C10			18FF-M1	

Precautions For Use


For your personal safety and the normal operation of the equipment, as well as to prevent fire, please note the following issues:

- 1.The rated current of the socket should be no less than the rated current of the relay.
- 2.Sockets are required to be firmly fixed to prevent the wiring from loosening and affecting the quality of wiring.
- 3.Be sure to disconnect power to the outlet before installation, disassembly, wiring, maintenance and inspection.
- 4.Prevent foreign objects such as wire shavings from falling inside this product when wiring.
- 5.Be sure to install the relay in place, and use accessories such as retainer if necessary to improve contact reliability. Do not use with incomplete connections.
- 6.Be sure to observe the relay ratings and do not overload the relay.
- 7.Before selecting a relay, make sure that the drive voltage matches the relay excitation voltage.

18FF-2Z/4Z-C9


Applicable conductor cross section

Single strand conductor	2×0.5/0.75/1.0/1.5 mm ²	
Multi strand conductor	Multi-stranded wire without standard sleeve	2×0.5/0.75/1.0/1.5 mm ²
	Multi-stranded wire with standard sleeve	2×0.2/0.5/0.75 mm ²

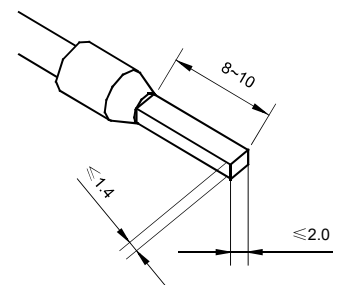


Precautions For Use

• The method of Wiring

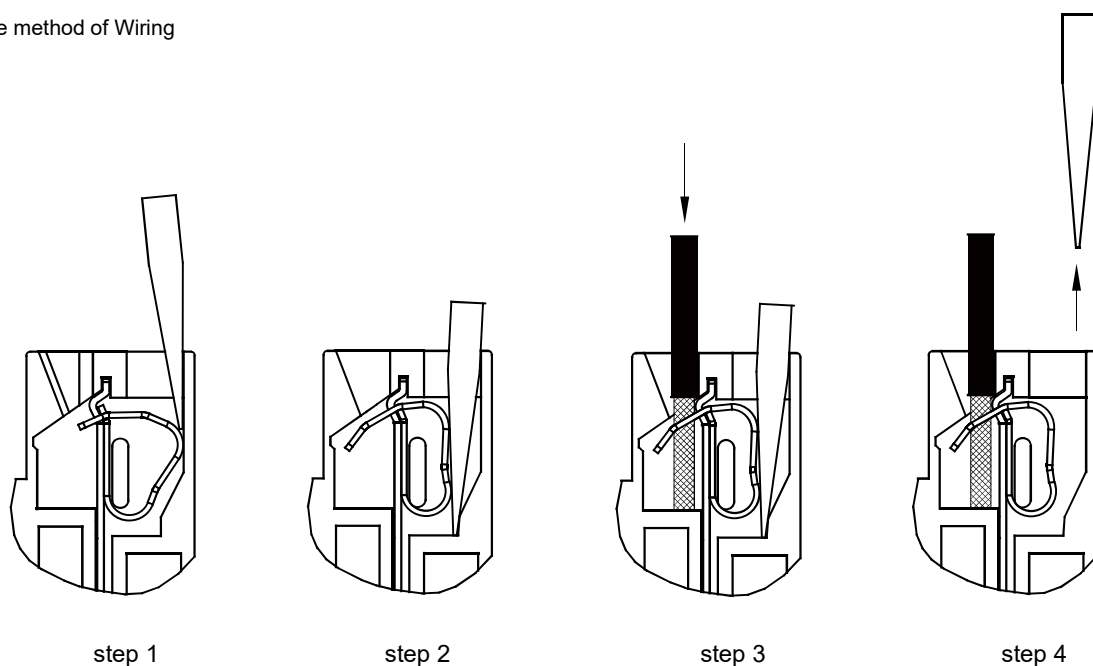

• Precautions for use

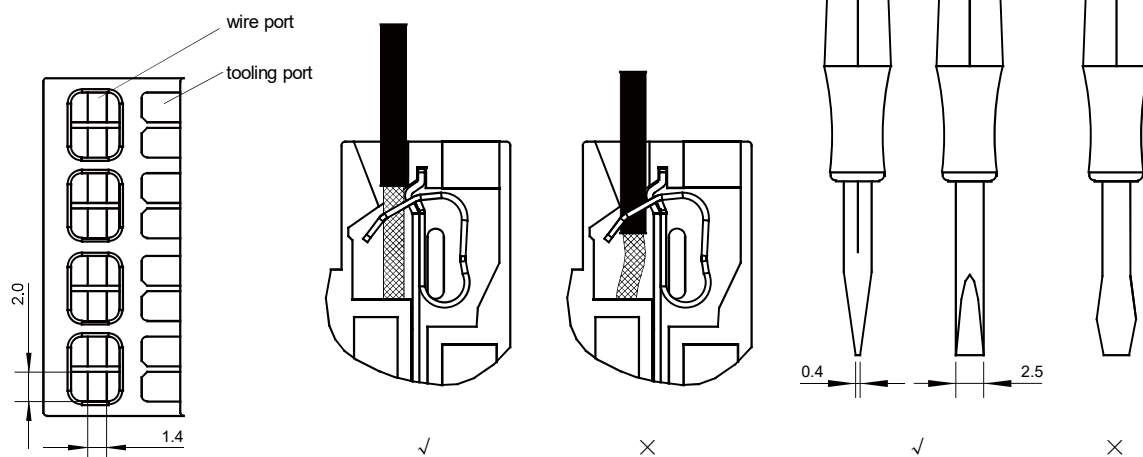

Things to be noticed when selecting sockets:

1. Please choose suitable relay socket according to the actual mounting environment, relay contact poles and terminal layout. If there is any query on selection, please contact Hongfa for the technical service;
2. Relevant accessories must be selected separately. Please indicate the model of the selected accessories when ordering;
3. Main outline dimension, outline dimension $> 50\text{mm}$, tolerance should be $\pm 1\text{mm}$; $20\text{mm} < \text{outline dimension} \leq 50\text{mm}$, tolerance should be $\pm 0.5\text{mm}$; $5\text{mm} < \text{outline dimension} \leq 20\text{mm}$, tolerance should be $\pm 0.4\text{mm}$; outline dimension $\leq 5\text{mm}$, tolerance should be $\pm 0.3\text{mm}$;
4. DIN rail mounting: recommend to use standard rail $35 \times 7.5 \times 1\text{mm}$, $35 \times 15 \times 1\text{mm}$; When installed vertically, the coil terminal at the bottom please .

Disclaimer

The specification is for reference only. See to "Terminology and Guidelines" for more information. Specifications subject to change without notice. We could not evaluate all the performance and all the parameters for every possible application. Thus the user should be in a right position to choose the suitable product for their own application. If there is any query, please contact Hongfa for the technical service. However, it is the user's responsibility to determine which product should be used only.

© Xiamen Hongfa Electroacoustic Co., Ltd. All rights of Hongfa are reserved.